

# Phase Manager version 7 documentation



## News

- **Version 7 release!**
  - Overview of Version 7.2 new features

## Features

- **Create phasing**
  - Introduction
  - Drawings management
  - GIS management
  - Areas and axes management
  - Areas Categories (New in v7)
  - Print areas management
  - Tasks management
  - Connected objects management
  - Mobile pictograms (v6 features)
  - The Gantt chart
  - The Live View (v6 features)
- **Tasks**
  - The tasks management interface
- **Labels and areas conditions**
  - Areas conditions and labels management
- **Deliverables management**
  - Introduction
  - The different types of deliverables
  - Creating deliverables
  - Customizing a deliverable
  - Customizing pages
  - Copy and/or update a deliverable
  - Managing statuses
  - Clipping drawings in deliverables
- **Page layout**
  - Creation of printing templates
- **Printing**
  - Printing deliverables
- **Calendars management**
  - Calendars management
- **File menu**
  - Import Export
  - Exporting the project's KML
  - Save project as a template
  - Archive a project
- **Options menu**
  - Project and Gantt properties
  - Labels management
  - User fields management

## Follow the tutorial

- Step 1 : Creation of the drawings
- Step 2 : Adding areas and a first task
- Step 3 - Importing the project tasks
- Step 4 - Adding areas shapes to imported tasks
- Step 5 - Adding polyline
- Step 6 - Adding tasks to the polylines
- Step 7 - Adding tasks styles and page layout
- Step 8 - Creation and personalization of the phasing book

## Ressources

- **Sources**
  - Data source files (PMX, KML, project and data models)

## Phase Manager installation

- Setup files download
- Prerequisites
- Connection to a Network license
- Standalone license installation and activation
- Installation and Network license activation
- USB license installation and activation
- Deactivating v2.0 / 3.0 licenses
- Updating to Phase Manager 7

## FAQ

- **Best practices**
  - Key points when creating a phasing
- **Create phasing**
  - Unable to delete an unused drawing
- **Import / Export**
  - Links types not recognized when imported
  - Areas and axes duplicated after import
- **Légends**
  - Changing the Gantt's font size
  - How to resize the Gantt chart
- **Deliverables**
  - Blue stripes beyond the limits of the drawing
  - Map outside the limits of the print area is printed
  - Testing a layout : cannot create a deliverable
  - The order of objects is not functioning
  - Areas/axes/objects missing from the phasing book
- **Tasks styles**
  - Task styles not taken into account